

352: Lighting, front

V70 (00-08), 2005, D5244T2, AW55-

50/51SN, L.H.D, YV1SW746952477297, 477297



14/2/2017





PRINT


352: Lighting, front**Operation****number:** 18832-2Strålkastarglas,
1st re**Operation****number:** 18833-3Strålkastarglas
följan**Headlamp lens,
restoration****Reconditioning**

On both sides.

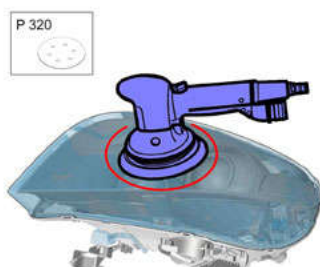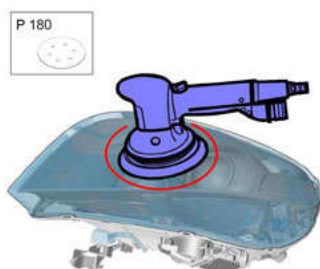
Remove the
headlights.
Headlamp/bulb,
replacing**Note! Make sure that all
varnish is gone.**

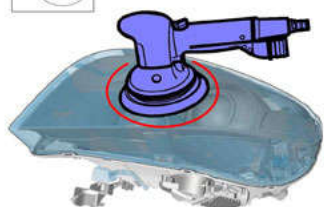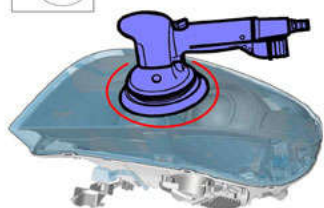

Wet Sanding

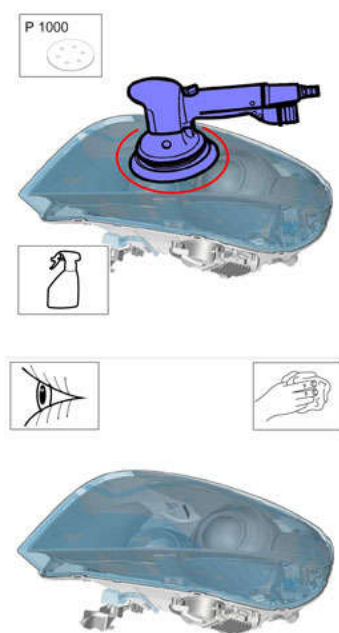


Wet Sanding




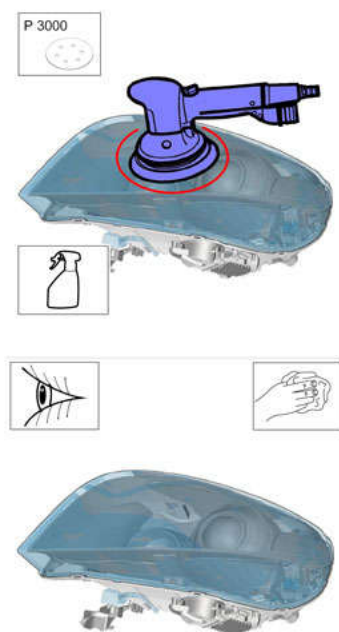


Wipe dry.

Apply a thin and even layer.

Use: Primer,

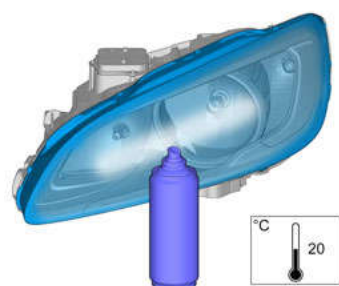

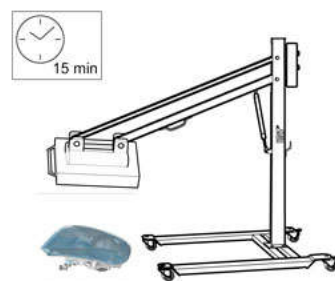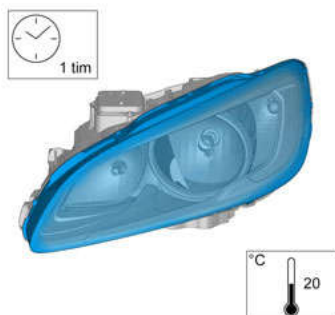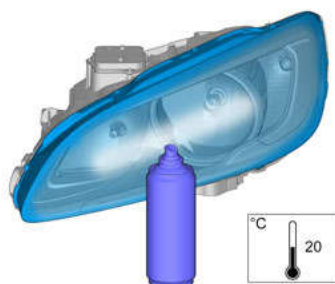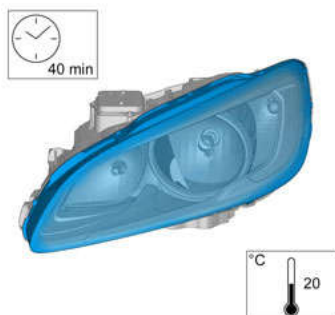

Apply an even layer.

Use: Varnish,

Note! The drying time applies to varnish when the infrared (IR) drying technique is used.

Install the
headlamps
Headlamp/bulb,
replacing

PRINT

14/2/2017